 


ANTI POLLUTION TECHNOLOGY, INC.
MODEL #5000.5
ELECTRICAL INSTALLATION MANUAL

ALL INSTALLATIONS: The explosion-proof float switch uses a hermetically sealed SPDT magnetic reed switch with contacts and connections as follows:

GROUND ... (GND)	GREEN WIRE
NORMALLY OPEN ... (NO)	WHITE WIRE
COMMON CONTACT.. (CC)	BLACK WIRE
NORMALLY CLOSED.. (NC)	RED WIRE



RECOMMENDATIONS:

1. The electrical connection of this unit into the pumping unit electric motor control, gas engine electrical system, or alarm system should be done by a licensed electrician, an engine mechanic, or instrumentation technician, respectively.
2. A Murphy 518-Tattletale or other latching safety switch should be used to prevent the pumping unit from starting up, for any reason, until the well has been checked by the pumper. The 518-APH can be used with either N.O. or N.C. contacts. An electrical schematic listings component recommended for use with the Murphy 518-APH is packed with each unit.
3. If the normally open contacts are used, the pumper should test the system periodically to ensure the electrical circuit is functionally properly. Damage to any part of a circuit using normally open contacts could prevent the circuit from functioning properly when required. Conversely, similar damage to a circuit using normally closed contacts should result in a "fail safe" shut down.
4. A low voltage control circuit should be used to provide longer contact life (contacts are rated 3 amps 120 VAC, 60 Hz).

ELECTRIC MOTOR: APT recommends that the normally closed contacts be used per the enclosed electrical schematic. This isolates the high voltage and provides a low voltage control to ensure the safety of operating personnel.

GAS ENGINE: The normally open contacts in the float switch can be used to ground out the coil and shut down the engine. The normally closed contacts can be connected to a separate alarm system. If high voltage ignition is being used, please install a resistor.

ANTI POLLUTION TECHNOLOGY, INC.
MODEL #5000.5
ELECTRICAL INSTALLATION MANUAL

Marking:



Ratings:

Anti Pollution Technology, Inc.

APT.5000.5

120 VAC, 60 Hz, 3A (max.)

Class I, Division I, Groups A, B, C, D; Class II, Division I, Groups E, F, G.

This equipment has been approved with an Operating Temperature Code of 3R. Outdoor Type Rating; Type 3R $-25\text{ C} \leq T_a \leq +109\text{ C}$

WARNING – To reduce the risk of ignition of hazardous atmospheres, conduit runs must have a sealing fitting connected within two inches of the enclosure.

ATTENTION - Pour réduire le risque d'inflammation des atmospheres dangereux, pistes de conduit doivent avoir une étanchéité raccord relié à deux pouces du boîtier.

WARNING – To reduce the risk of ignition of hazardous atmospheres, disconnect the equipment from the supply circuit before opening or servicing. Keep assembly tightly closed when in operation.

ATTENTION - Pour réduire le risque d'inflammation des atmospheres dangereux, débrancher l'appareil du circuit d'alimentation avant d'ouvrir ou d'entretien. Tenir fermé hermétiquement pendant qu'il fonctionne.

WARNING – HOT SURFACE – RISK OF BURN

ATTENTION - SURFACE CHAUDE – RISQUE DE BRÛLURE

Only 'raintight' or 'wet location' conduit and fittings shall be used.

The unit should be grounded by use of the green grounding wire in accordance with local and national electrical codes.

SPACE & REPLACEMENT PARTS

If any parts are missing from the box please contact your supplier. Parts may be obtained directly from APT or where originally purchased. APT maintains a stock of components and can ship most parts within 24 hours.

WARRANTY AND LIMITATION OF LIABILITY

APT, Inc. warrants all products manufactured by it to be free from defects in material and workmanship under normal use and service. APT's obligation under this warranty is limited to making good, at its factory, any part or parts thereof, which APT's examination shall disclose to its satisfaction to be defective. APT, however, assumes no risk or liability for results of the use of the products purchased from it. No other express warranties are made, and all implied warranties are disclaimed and negated, including the Implied Warranty of Merchantability and the Implied Warranty of Fitness for Particular Purpose. APT shall have no responsibility for incidental or consequential damages resulting from the use of its products.